


CSD 950

foamcare

refillable foam dispenser

www.calfarme.com

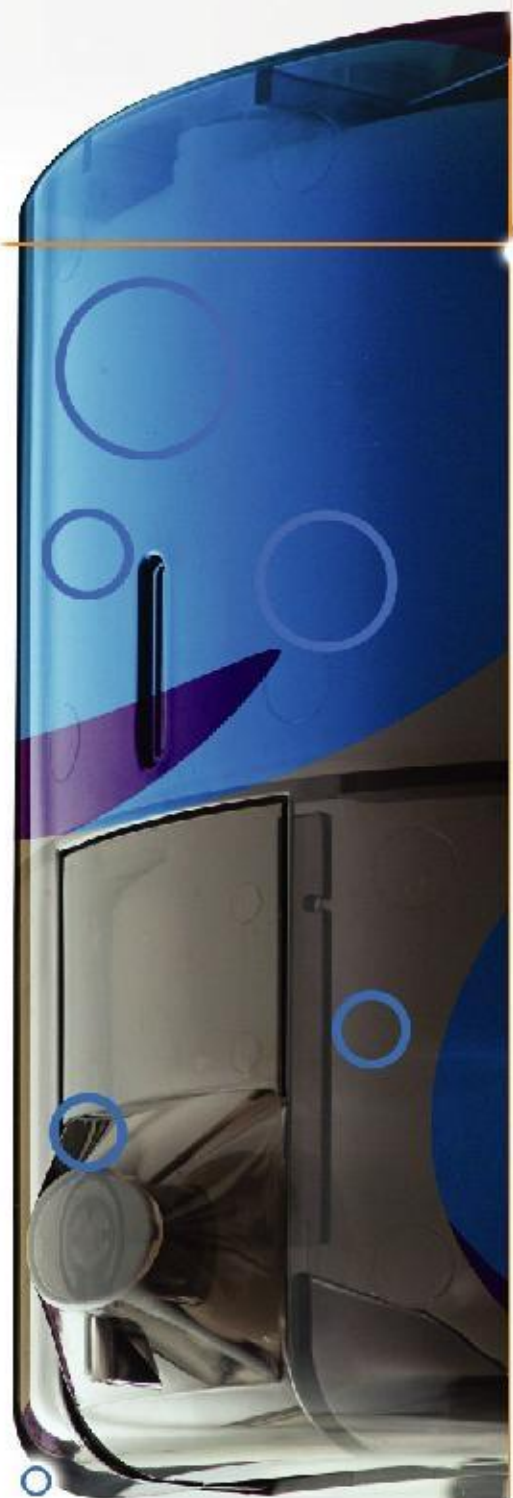

**ADVANTAGES OF FOAMCARE™
REFILLABLE FOAM DISPENSER:**

- Instant foaming effect for a quicker and easier wash that helps improve hygiene
- Reduces water requirement compared to traditional washing cream or lotion
- Controls usage with longer interval between refilling and ensure cost saving

NEW FOAMCARE™ DISPENSER MODEL NO:



CSD-950MLW
(white cover)

CSD-950MLT
(transparent cover)

SPECIFICATIONS:

REFILLING CAPACITY: Maximum 950ml

DOSAGE: 2,375 washes per refill

OUTPUT ML: 0.4ml per dose

DIMENSIONS: 210mm(H) X 155mm(W) X 85mm(D)

MATERIALS: DURABLE ABS/AS PLASTIC

foamcare

refillable foam dispenser



INSTALLATION INSTRUCTIONS:

1. **POSITION:** Decide where to install the dispenser for convenient user access.
2. **TAPE MOUNTING:** Clean entire mounting surface. Remove protecting cover from adhesive tape on back of dispenser. Carefully position dispenser and firmly press against the mounting surfaces for at least 10 seconds. See diagram 1 for normal front facing installation and diagram 2 for corner installation.
3. **PERMANENT SCREW MOUNTING (OPTIONAL):** Drill holes at a proper position on mounting surfaces. Insert wall plug and screw to secure dispenser permanently onto wall. See diagram 3
4. **TO USE:** Press on the button as shown to dispense instant foam to your palm. You can monitor the remaining contents of refill through the window on the cover of the dispenser. See diagram 4.